#### EX PARTE OR LATE FILED

May 6, 1999

Ms. Magalie Roman Salas
Office of the Secretary
Federal Communications Commission
The Portals
445 Twelfth Street, S.W., Room 8143
12<sup>th</sup> Street Lobby, TW-A325
Washington, DC 20554

RE: CC Docket No. 94-102

Dear Ms. Salas:

RECEIVED

MAY 7 1999

FEDERAL COMMUNICATIONS COMMUNICATIONS
OFFICE OF THE SECRETARY

On May 5, 1999, the Wireless Consumers Alliance, represented by Carl Hilliard, Denise Blomme, Sharon Hilliard, Jon Linkous, David Carey Ermilia Luchuga, Marsha Spielholz and Mark Smith met with the following individuals regarding the above referenced proceeding:

Chairman William Kennard and his staff Commissioner Susan Ness and her staff Paul Meisner of Commissioner Furtchgott-Roth's office Staff of the FCC's Wireless Bureau

The attached information was distributed at the meeting.

Pursuant to Section 1.1206 of the Commissioner's Rules, an original and one copy of their letter and its attachments are being filed with your office.

Sincerely, Market O.

Carl Hilliard

Attachment

No. of Copies rec'd O+)
List A B C D E

### Wireless Consumers Alliance

#### Strongest Signal Proposal

The Alliance requests that the FCC order the remove of the artificial barrier, inserted by wireless carriers, that prevents handsets from performing a normal scan of <u>all</u> channels to select the best channel available when 9-1-1 is dialed.

The following information summarizes the statements and issues before the Commission.

# Wireless phones are not reliable in all emergency situations. The public is at risk.

- Safety & security is the number one reason for owning a wireless phone.
- Consumers rely on misleading and false advertising by the wireless industry.
   Complete coverage is just not possible.
- The industry wants to make wireless phones the primary form of personal telecommunication: "Just like your wireline phone."
- Tragedies from unconnected 9-1-1 calls are here and on the rise.

The Commission has a clear responsibility to ensure public safety. There should be <u>NO</u> compromise when public safety is at stake.

# The Carriers control the equipment market with no interest in promoting better connections to 9-1-1.

- Carriers have blocked the deployment of strongest signal (Audiovox).
- There is no motivation for the industry to maximize public access to 9-1-1 services. It is a non-profit making service.
- Misleading consumer advertising is commonplace while emergency access abilities are misstated.
- If the decision is left up to the carriers, the public will be shortchanged.

Generic rule language (a handset must be able to seek out the other analog cellular carrier if the 9-1-1 call "does not go through") will NOT fix the problem.

- The handset does not know if the call is connected.
  - The handset can lock-in to an inadequate signal.
  - Poor channels can be selected.
    - Static and cross talk.
    - Dropped calls.
- Time delay cannot exceed 12 seconds.
  - A/B Roaming
    - Re-registration can take up to 18 seconds.
    - Retry can take up to 65 seconds.
  - Strongest Signal
    - 4-6 seconds.
- Motorola's Network Solution is an alternative solution but...
  - Lengthy time to develop
    - "Lives may be unnecessarily lost waiting for appropriate technological solutions."
  - Expensive
    - Extensive changes to software/hardware for the base stations.

Strongest Signal (all channel scanning) gives the caller the best available channel of communication for 9-1-1 calls – simple A/B or even automatic A/B does not.

- Strongest signal can be quickly deployed at a trivial cost.
  - Automatic A/B will take 3 times longer to deploy. It is more complex and is more expensive.
- Call connect time favors strongest signal.
  - Strongest signal takes 4-6 seconds, up to 65 seconds for A/B.
- Automatic A/B has serious flaws
  - Lock-in limits the effectiveness of automatic A/B.
  - CTIA uses cover-up terms such as the call was "completed," "successfully sent" or the handset is in a "conversation state" to imply that the call has been connected. This is not true.
  - Automatic A/B can lead to poor quality channels with static, cross-talk and dropped calls.
- The so-called "objections" to strongest signal are without basis in fact.
  - False and misleading statements have been made over and over again:
    - False -"Automatic A/B considers elements of call set up which Strongest Signal does not."
    - Misleading -"Strongest Signal will not always give you the strongest voice channel"

#### Conclusion

- The Commission has found that the public interest requires access to 911 over the wireless system "that will provide the quickest and most reliable and accurate response."
- After more than four years the only viable solution that has been proposed is strongest signal.


### Software Modifications


Strongest Signal
Strongest/Adequate Signal


## Strongest Signal


Scan all 42 control channels Section 2.6.3.2

Lock on strongest channel
Seize Reverse Control Channel
Connect to the PSAP

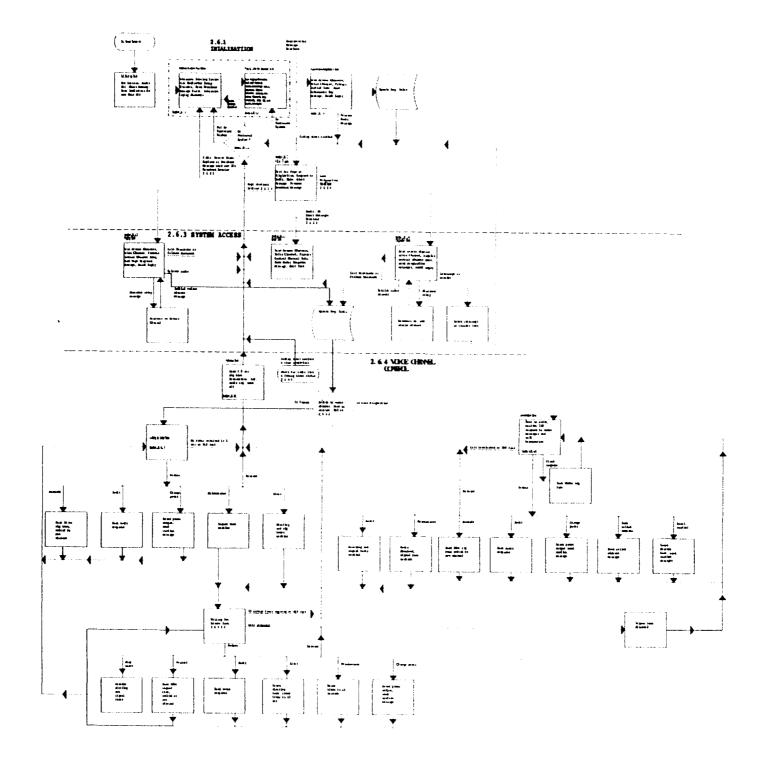

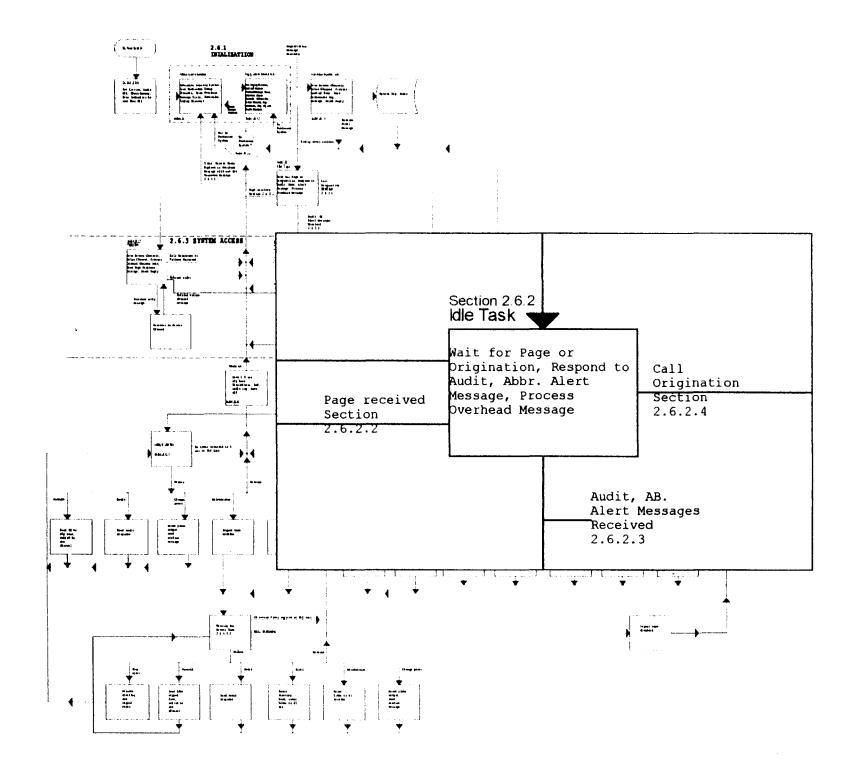

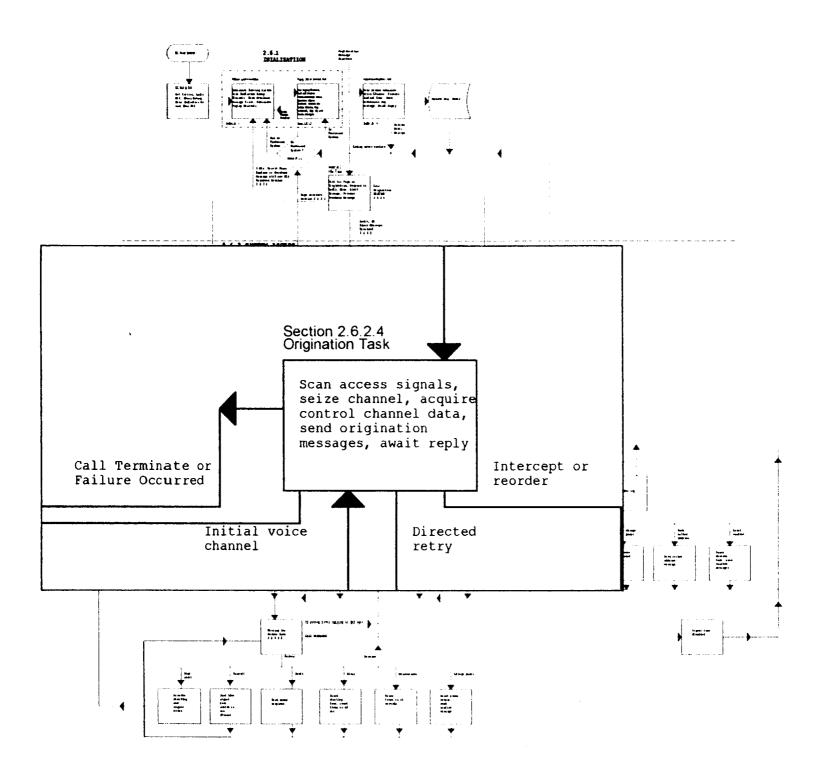

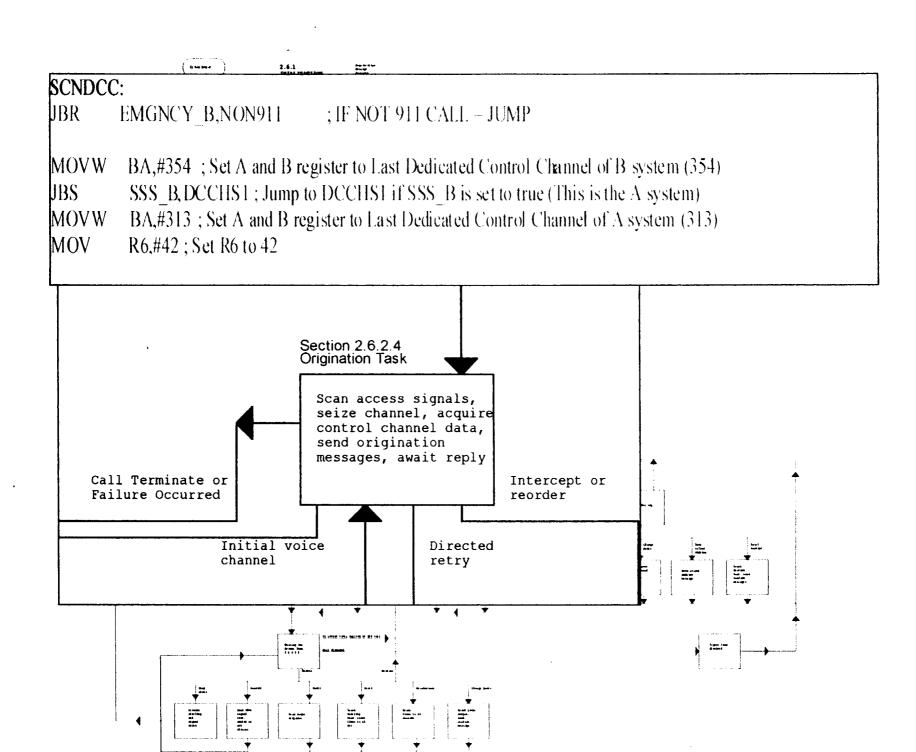

( atoms ) 2.6.1 ==="


NON911:

MOVW BA,#IDCCA; Set A and B register to First Dedicated Control Channel of A system (333)

JBS SSS\_B, DCCHS1; Jump to DCCHS1 if SSS\_B is set to true (This is the A system)

MOVW BA, #IDCCB; Set A and B register to First Dedicated Control Channel of B system (334)

MOV R6,#NDED; Set R6 to 21 (NDED contains 21)

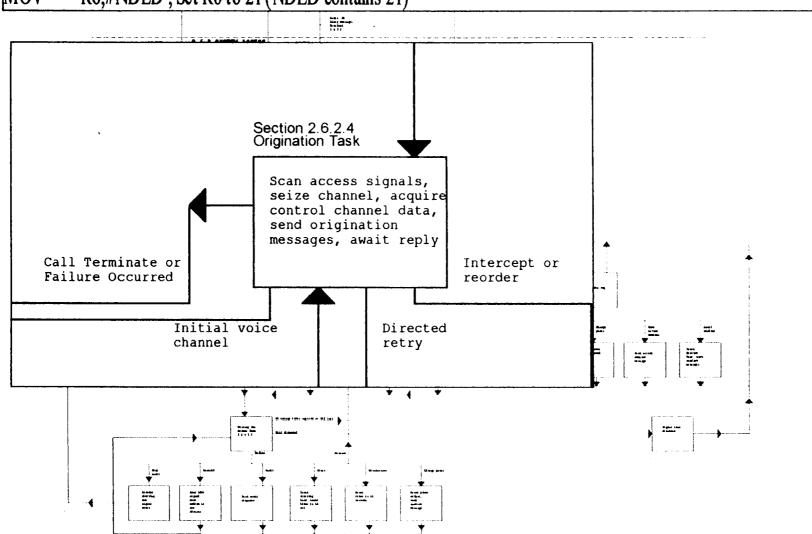


DCCHS1:

ST B,CHAN\_D+1; Store the Channel number from above into the Channel Variable

ST A,CHAN\_D

MOV R6,#NDED; Set R6 to 21 (NDED contains 21)

CAL SCNCC; Call the Scan Control Channel Routine

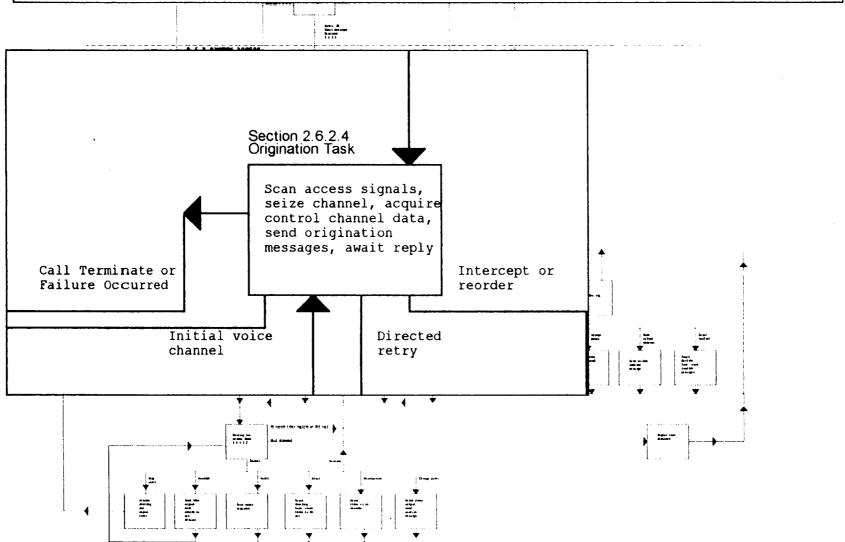

SCNCC:

CLRW BA; Clear the B and A registers


ST A,RSSI1\_D ; RSSI1\_D <--- 0 (This is the strongest Channel level)


ST A,RSSI2\_D ; RSSI2\_D <--- 0 (This is the second strongest Channel level)

MOVW CHWK1\_D,BA ; CHWK1\_D <-- 0 (This is the strongest Channel number)

MOVW CHWK2\_D,BA ; CHWK2\_D <-- 0 (This is the second strongest Channel number)

MOV NLIST D,R6; Move the number of Control Channels to scan into NLIST D (21 or 42)

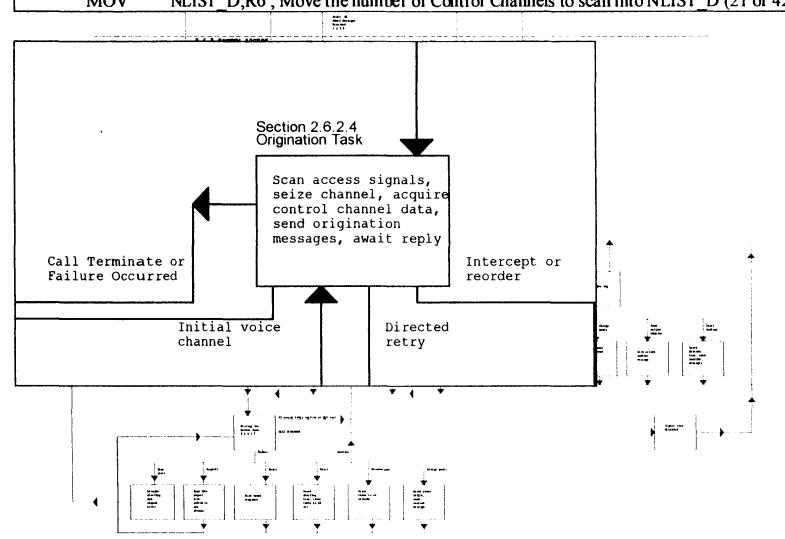

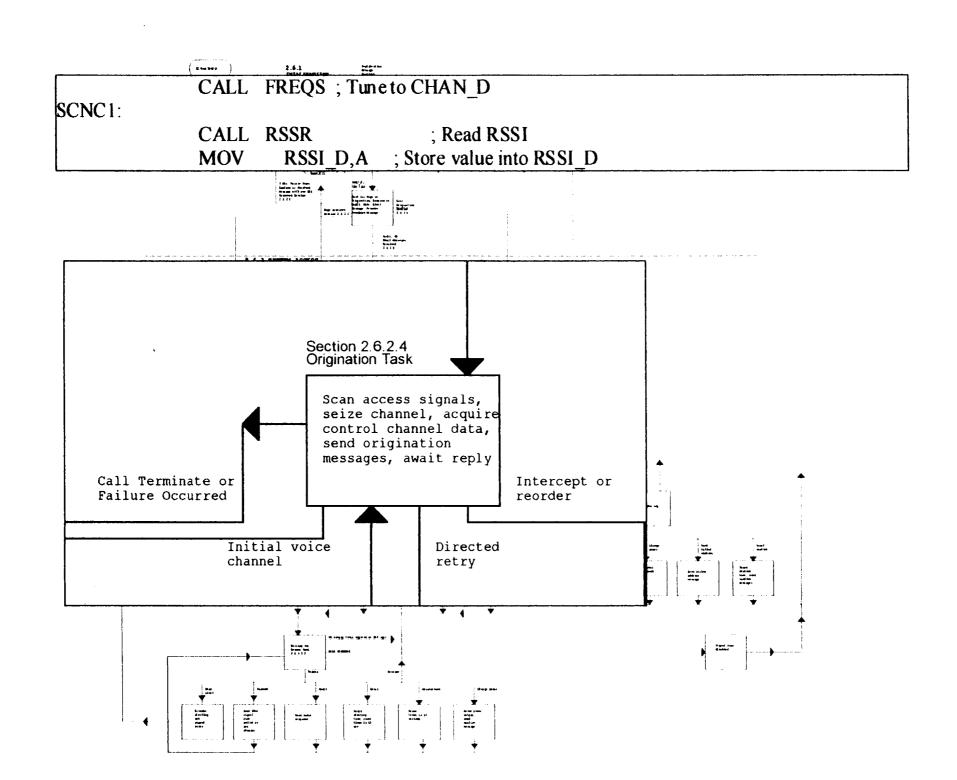

```
Move RSSI1 to RSSI2 and new value into RSSI1

MOV RSSI2 D,RSSI1 D; RSSI2 D <--- RSSI1 D


MOV RSSI1 D,RSSI D; RSSI1 D <--- RSSI D

Shift Channel numbers down to correspond to RSSI values

MOVW BA,CHWK1 D

MOVW CHWK2 D,BA; CHWK2 D <--- CHWK1 D

MOVW CHWK1 D RA; CHWK1 D
```

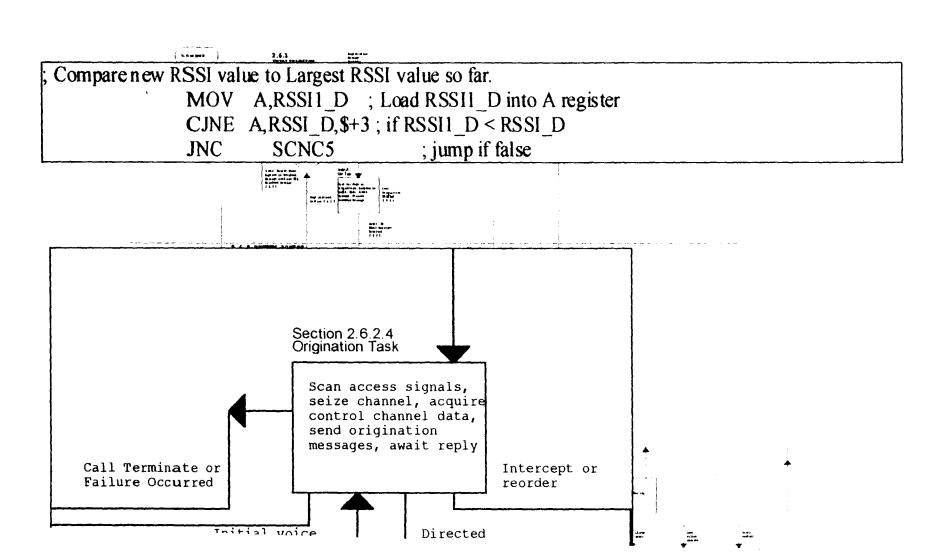

```
MOV A, NLIST D; Load A register with Number of Control Channels
DEC A; Decrement A
ST A, NLIST D; Store A into Number of Control Channels
JZ SCNC7; If A = 0 then Jump to SCN7 (Done with loop)
CALL CNTUPCH; COUNT UP CHANNEL
```

```
SCNC5:

MOV A,RSSI2_D;(CSA) TO MAKE CJNE VALID


CJNE A,RSSI_D,$+3 ; if RSSI2_D < RSSI_D

JNC SCNC6 ; jump if false

MOV RSSI2_D,RSSI_D ; RSSI2_D <--- RSSI_D

MOVW BA,CHAN_D

MOVW CHWK2_D,BA ; CHWK2_D <--- CHAN_D
```

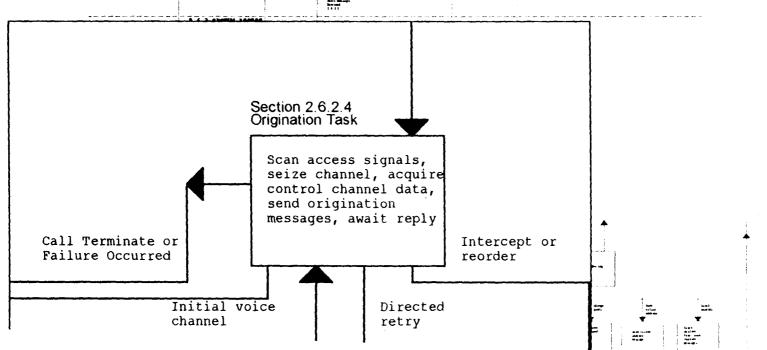



CHWK1\_D is moved to CHAN\_D and the channel is tuned.

MOV CHAN\_D,CHWK1\_D

MOV CHAN\_D+1,CHWK1\_D+1

MOV RSSI\_D,RSSI1\_D

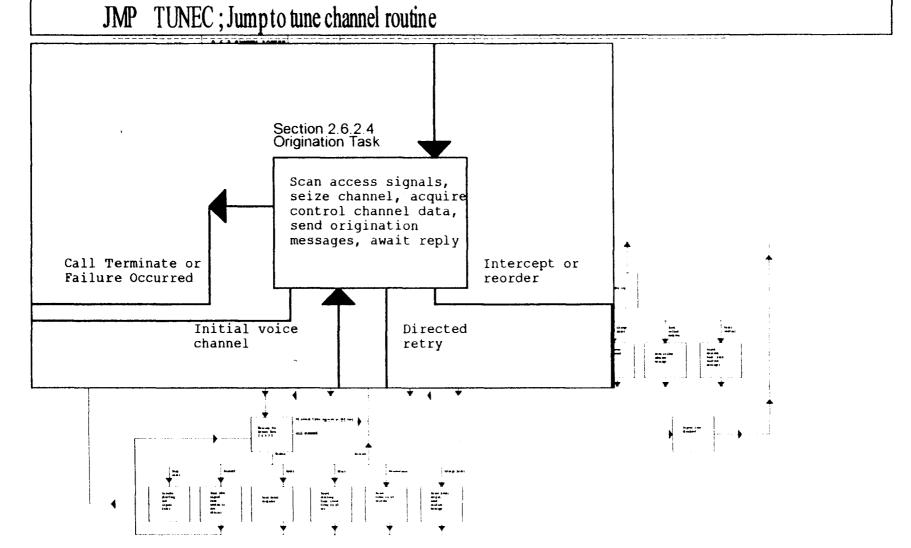

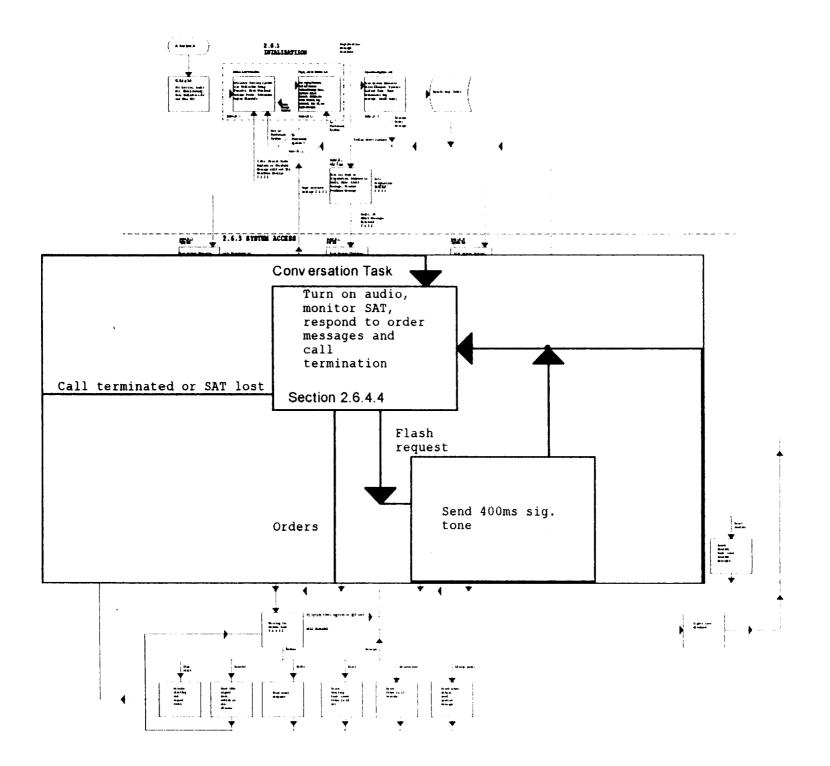

## Strongest/Adequate Signal

Scan all 21 control channels for Preferred System Section 2.6.3.2

Compare strongest channel to preset Limit (-80 dBm)

If RSSI is greater than or equal to Limit

Tune to Channel

Seize Reverse Control Channel

Connect to PSAP


If RSSI is less than the Limit


Scan remaining control channels

tune to strongest channel across 42 control channels

Seize Reverse Control Channel

Connect to the PSAP

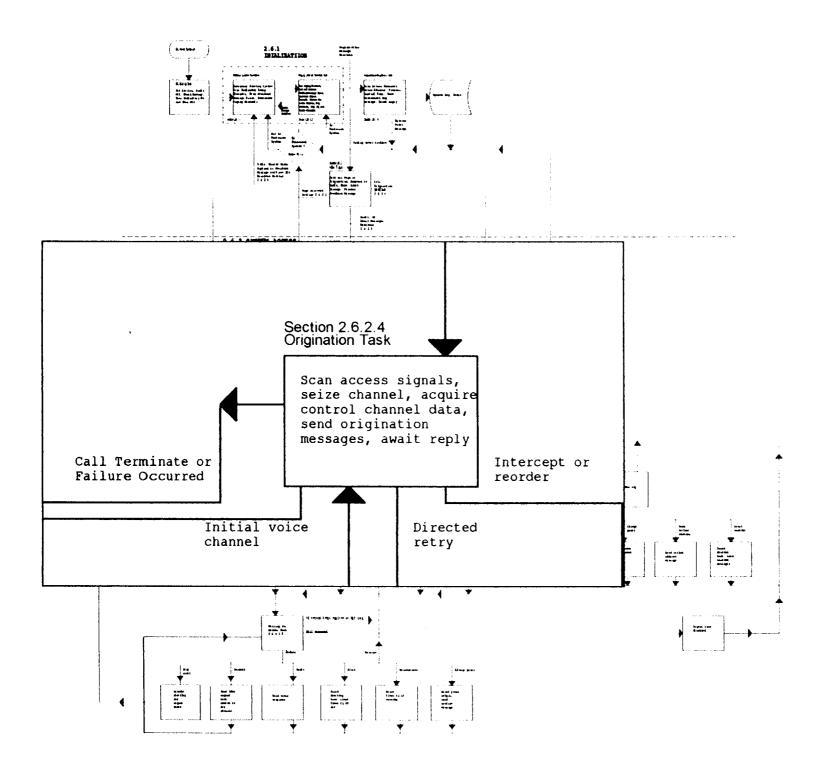

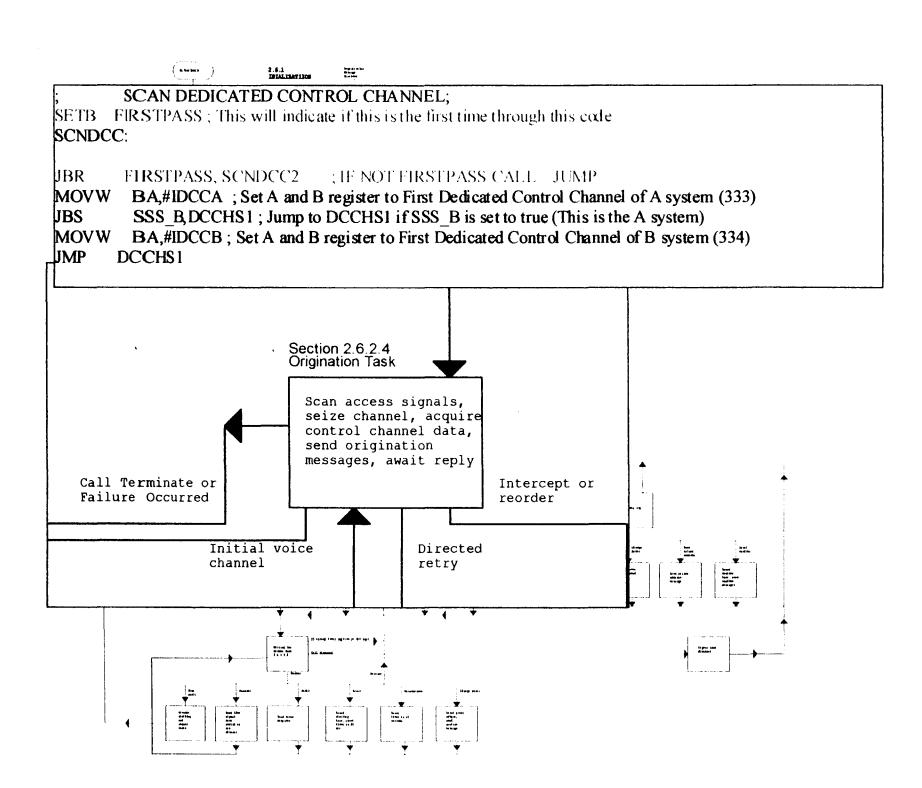



SCNDCC2:


MOVW BA,#354; Set A and B register to Last Dedicated Control Channel of B system (354)


SSS\_B,DCCHS1; Jump to DCCHS1 if SSS\_B is set to true (This is the A system) JBS

BA,#313; Set A and B register to Last Dedicated Control Channel of A system (313) MOVW

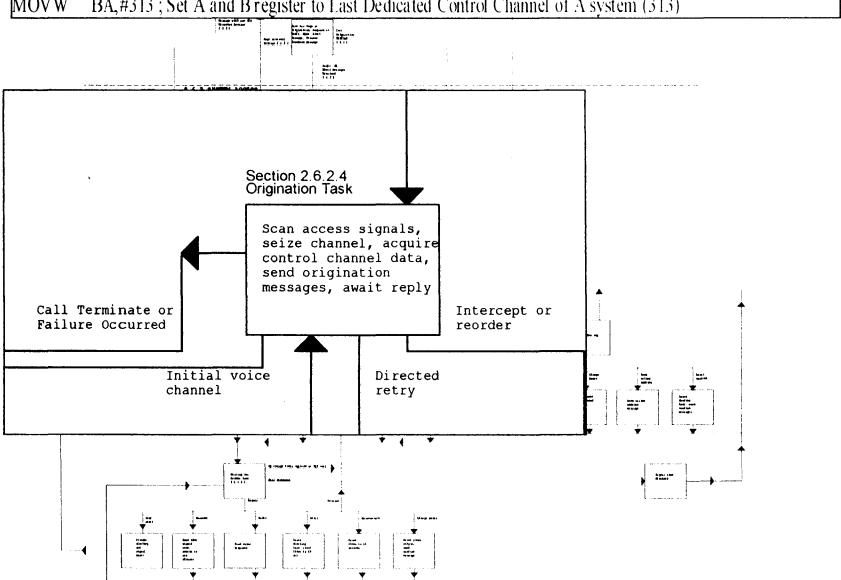

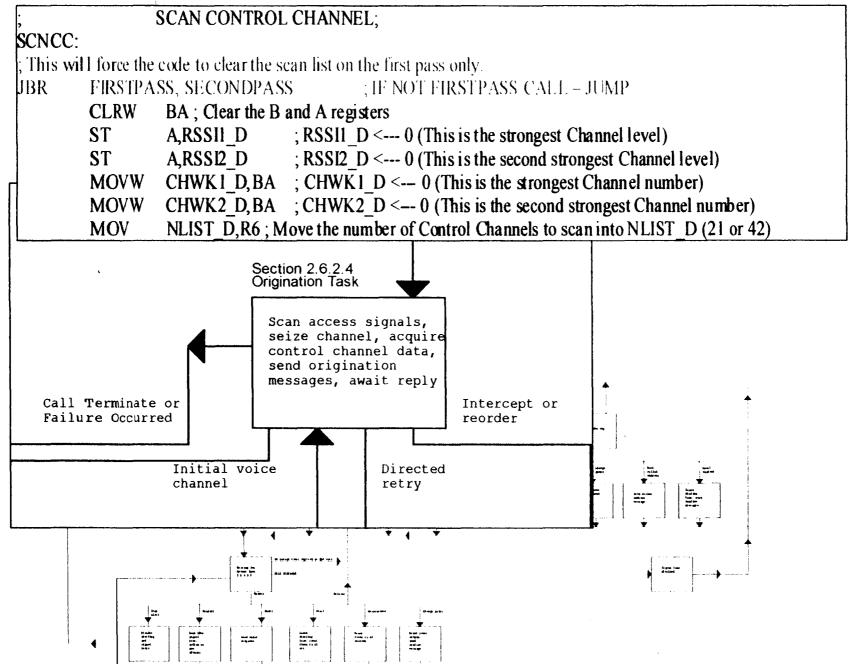

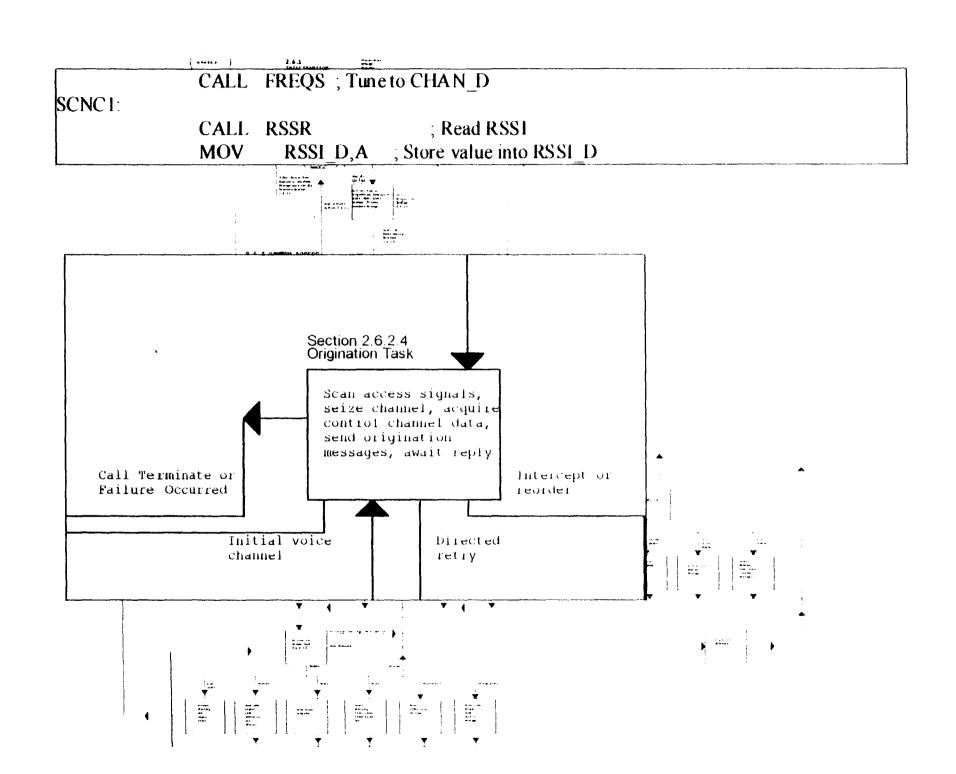

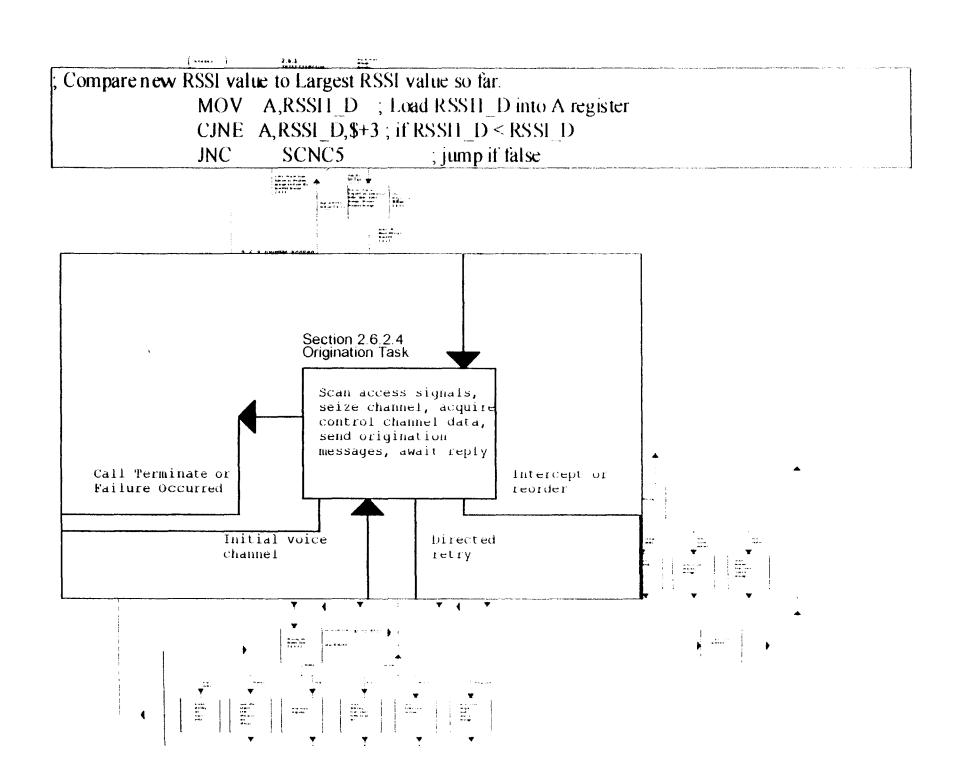

```
; Move RSSI1 to RSSI2 and new value into RSSI1

MOV RSSI2_D,RSSI1_D ; RSSI2_D <--- RSSI1_D

MOV RSSI1_D,RSSI_D ; RSSI1_D <--- RSSI_D


; Shift Channel numbers down to correspond to RSSI values


MOVW BA,CHWK1_D

MOVW CHWK2_D,BA ; CHWK2_D <--- CHWK1_D


MOVW BA,CHAN_D


MOVW CHWK1_D,BA ; CHWK1_D <--- CHAN_D
```

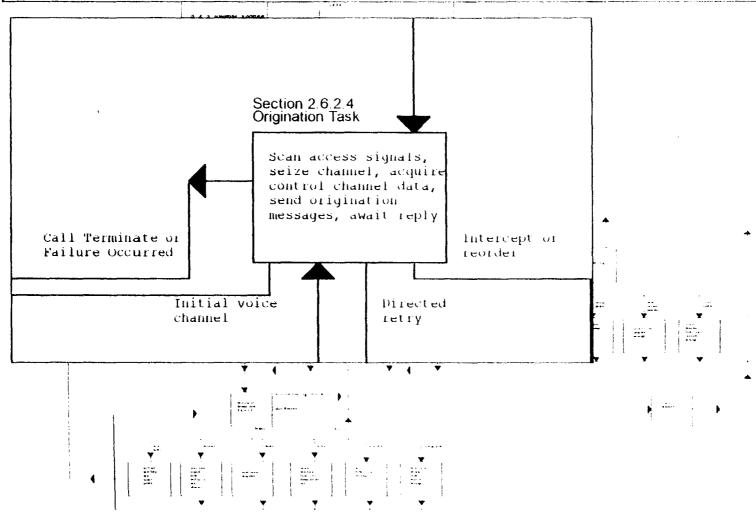


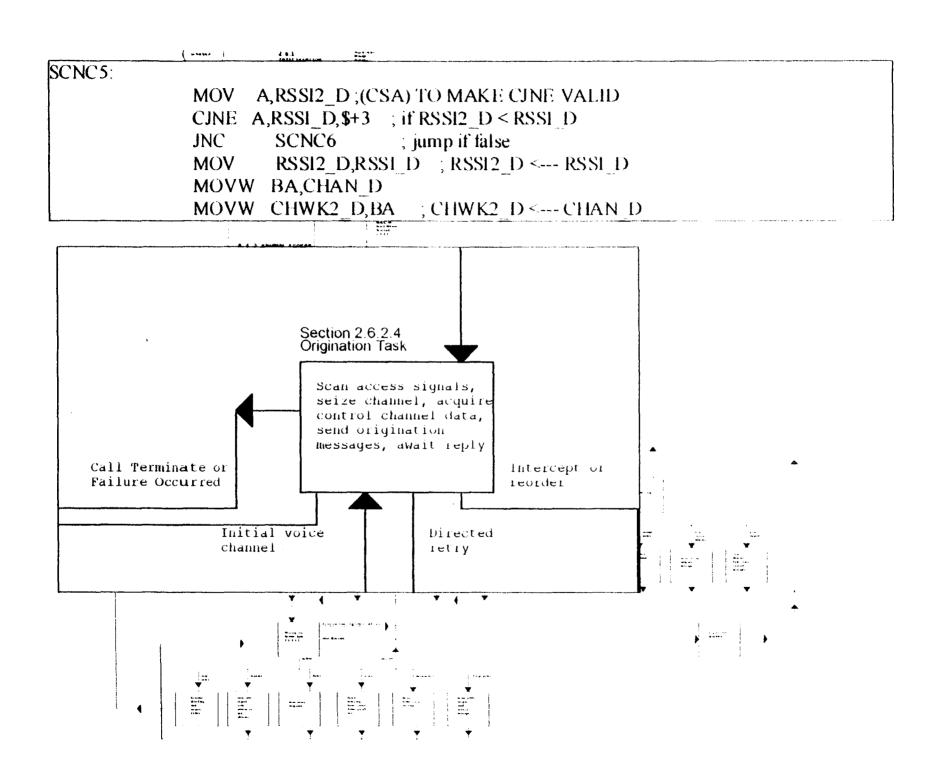

MOV A, NLIST D; Load A register with Number of Control Channels DEC A ; Decrement A ST A, NLIST D ; Store A into Number of Control Channels SCNC7 ; If A = 0 then Jump to SCN7 (Done with loop) CALL CNTUPCH ; COUNT UP CHANNEL CALL FREQS; Tune to new channel **JMP** SCNC1; Go back to the top Section 2.6.2.4 Origination Task Scan access signals, seize channel, acquire control channel data, send origination messages, await reply Call Terminate or Intercept or Failure Occurred reorder Initial voice Directed channel retry

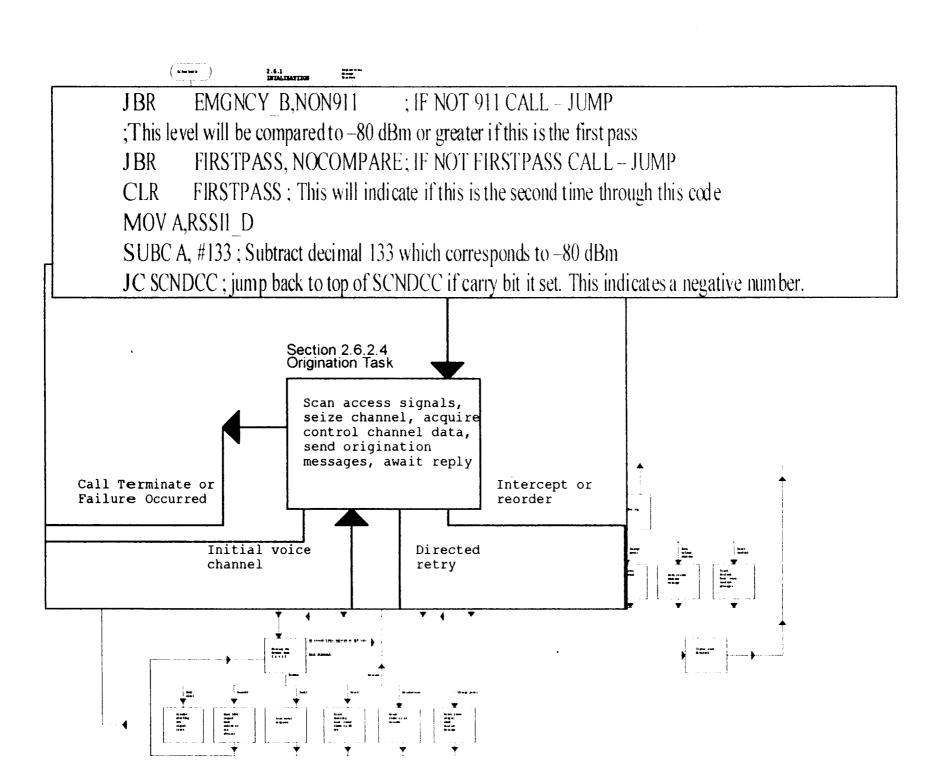

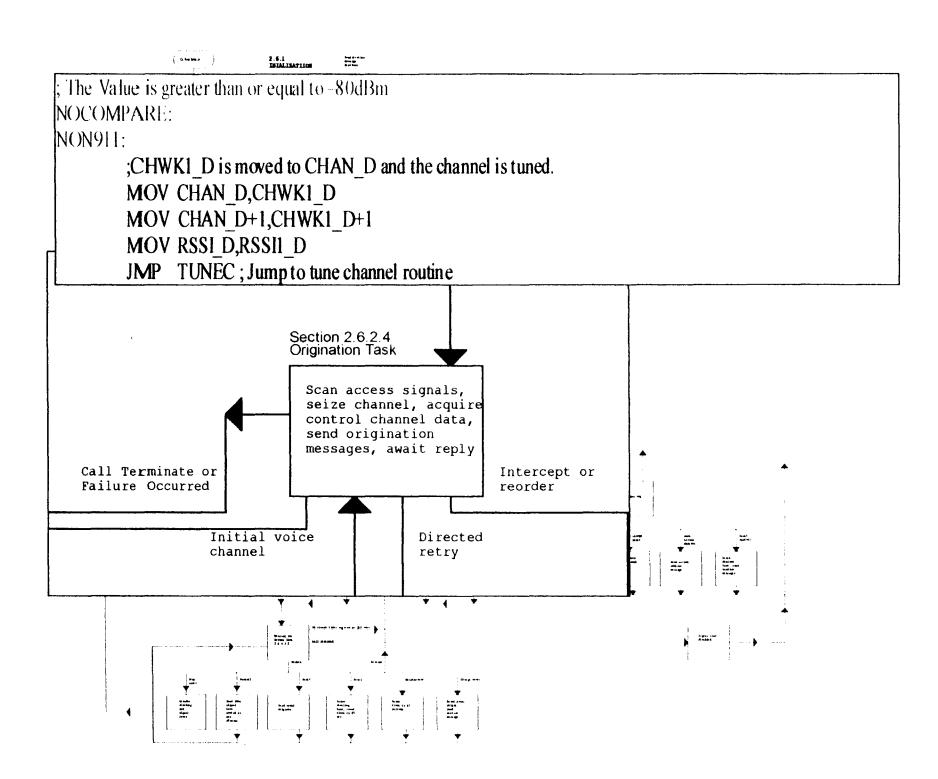

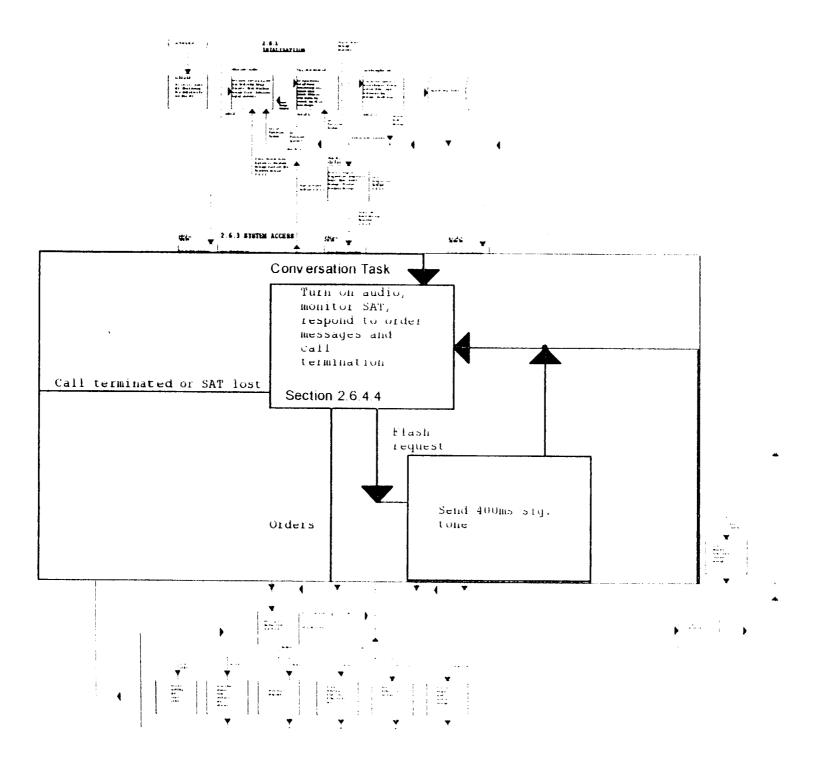

## Cost to Implement

	Strongest/Adequate Signal with Adjustable Threshold Level	Strongest/Adequate Signal	Strongest Signal
Lines of Code	160	25	20
Bytes of Code	. 480	75	60
Code Analysis	\$120,000.00	\$60,000.00	\$60,000.00
Code Mod.	\$240,000.00	\$37,500.00	\$30,000.00
Code Testing	\$360,000.00	\$240,000.00	\$240,000.00
Manufacturing	\$224,000.00	\$224,000.00	\$224,000.00
Documentation	\$250,000.00	\$0.00	\$0.00
Total	\$1,194,000.00	\$561,500.00	\$554,000.00
Cost/Handset	\$0.12	\$0.06	\$0.06

```
Original Code for section 2.6.3.2
```

#### From Memory Initialization Task NDED EOU 21 IDCCA EQU 333 IDCCB EQU 334 From Scan Dedicated Control Channel Task. SCAN DEDICATED CONTROL CHANNEL; SCNDCC: MOVW BA, #IDCCA; Set A and B register to First Dedicated Control Channel of A system (333) SSS\_B,DCCHS1; Jump to DCCHS1 if SSS\_B is set to true (This is the A system) MOVW BA, #IDCCB; Set A and B register to First Dedicated Control Channel of B system (334) DCCHS1: ST B,CHAN D+1. Store the Channel number from above into the Channel Variable STA,CHAN D MOV R6,#NDED; Set R6 to 21 (NDED contains 21) CAL SCNCC; Call the Scan Control Channel Routine This routine is called with the value of R6 = NDED SCAN CONTROL CHANNEL: SCNCC:

```
CLRW
          BA; Clear the B and A registers
ST
          A,RSSII D
                          : RSSI1 D <--- 0 (This is the strongest Channel level)
ST
          A,RSSI2 D
                          : RSSI2 D <-- 0 (This is the second strongest Channel level)
MOVW
          CHWK1_D,BA ; CHWK1_D \leftarrow 0 (This is the strongest Channel number)
MOVW
         CHWK2_D,BA , CHWK2_D <= 0 (This is the second strongest Channel number)
MOV
          NLIST_D,R6; Move the number of Control Channels to scan into NLIST_D (21)
```

Code to tune to the CHAN D and read the RSSI value is here

This will include incrementing the channel through the required number of control channels. The NLIST D variable will decrement. If it is not zero the loop will continue.

RSSI1\_D will contain the strongest level read across the 21 control channels. CHWK1\_D will contain the channel number with the strongest RSSI level. RSSI2\_D will contain the second strongest level read across the 21 control channels. CHWK2 D will contain the channel number with the second strongest RSSI level.

CHWK1 D is moved to CHAN D and the channel is tuned.

MOV CHAN D,CHWKI D MOV CHAN D+1,CHWK1 D+1 MOV RSSI\_D,RSSII D

JMP TUNEC; Jump to tune channel routine

#### Strongest Signal Code for section 2.6.3.2

From Scan Dedicated Control Channel Task.

```
SCAN DEDICATED CONTROL CHANNEL;
SCNDCC:
        EMGNCY_B.NON911
                                   H NOTALICALL - JUMP
JBR.
MOVW
         BAA#354 . Set A and B register to Last Dedicated Control Channel of B system (354)
JBS
          SSS_B.DCCHS1 (Jump to DCCHS1 )(1888_B )s set to true (This is the A system).
MOVW
          BA.#313. Set A and B register to East Dedicated Control Channel of A system (313)
MOV
          R6,#42 . Set Ro to 42
NON911
MOVW
         BA, #IDCCA; Set A and B register to First Dedicated Control Channel of A system (333)
лвs
          SSS_B,DCCHS1; Jump to DCCHS1 if SSS_B is set to true (This is the A system)
MOVW
         BA, #IDCCB; Set A and B register to First Dedicated Control Channel of B system (334)
MOV
          R6,#NDED; Set R6 to 21 (NDED contains 21)
DCCHS1:
        ST
                  B,CHAN D+1; Store the Channel number from above into the Channel Variable
        ST
                  A,CHAN D
                  SCNCC; Call the Scan Control Channel Routine
        CAL
                 SCAN CONTROL CHANNEL:
SCNCC:
        CLRW
                  BA; Clear the B and A registers
        ST
                                  ; RSSI1_D <-- 0 (This is the strongest Channel level)
                  A,RSSI1_D
        ST
                  A,RSSI2 D
                                  ; RSSI2 D <-- 0 (This is the second strongest Channel level)
        MOVW
                  CHWK1_D,BA : CHWK1_D <-- 0 (This is the strongest Channel number)
        MOVW
                  CHWK2 D,BA ; CHWK2 D <-- 0 (This is the second strongest Channel number)
        MOV
                  NLIST_D,R6; Move the number of Control Channels to scan into NLIST_D (21 or 42)
```

Code to tune to the CHAN\_D and read the RSSI value is here

This will include incrementing the channel through the required number of control channels.

The NLIST\_D variable will decrement. If it is not zero the loop will continue.

RSSI1\_D will contain the strongest level read across the 21 or 42 control channels. CHWK1\_D will contain the channel number with the strongest RSSI level. RSSI2\_D will contain the second strongest level read across the 21 or 42 control channels. CHWK2\_D will contain the channel number with the second strongest RSSI level.

CHWK1\_D is moved to CHAN\_D and the channel is tuned.

MOV CHAN\_D,CHWK1\_D MOV CHAN\_D+1,CHWK1\_D+1 MOV RSSI\_D,RSSI1\_D

JMP TUNEC; Jump to tune channel routine

From Scan Dedicated Control Channel Task.

```
SCAN DEDICATED CONTROL CHANNEL;
SUTB - FIRSTPASS. This will indicate if this is the first time through this code
SCNDCC:
         FIRSTPASS, SCNDCC2
                                    . IF NOT FIRS IPASS CALL + JUMP
\PiR
MOVW
          BA, #IDCCA: Set A and B register to First Dedicated Control Channel of A system (333)
JBS
          SSS B,DCCHS1; Jump to DCCHS1 if SSS B is set to true (This is the A system)
MOVW
          BA, #IDCCB; Set A and B register to First Dedicated Control Channel of B system (334)
JMP
        DCCHS1
SCNDCC2
MOVW
        BA.#354 Set A and B register to Last Dedicated Control Channel of B system (354).
          SSS_B.DCCHS1; Jump to DcCHS1 if SSS_B is set to true (This is the A system)
MOVW
          BA #313 , Set A and B register to Last Dedicated Control Channel of A system (313)
DCCHS1:
        ST
                   B,CHAN D+1; Store the Channel number from above into the Channel Variable
        ST
                   A,CHAN D
        MOV
                   R6,#NDED; Set R6 to 21 (NDED contains 21)
                   SCNCC; Call the Scan Control Channel Routine
        CAL
                 SCAN CONTROL CHANNEL;
SCNCC:
. This will force the code to clear the scan list on the first pass only
        FIRSTPASS, SECONDPASS
                                            THE NOT FIRSTPASS CALL - JUMP
        CLRW
                   BA; Clear the B and A registers
        ST
                   A,RSSII D
                                   ; RSSI1 D <-- 0 (This is the strongest Channel level)
        ST
                                   ; RSSI2 D <-- 0 (This is the second strongest Channel level)
                   A,RSSI2 D
        MOVW
                   CHWK1_D,BA ; CHWK1_D <-- 0 (This is the strongest Channel number)
                   CHWK2 D,BA ; CHWK2 D <--- 0 (This is the second strongest Channel number)
        MOVW
        MOV
                   NLIST D,R6; Move the number of Control Channels to scan into NLIST D (21 or 42)
SECONDPASS:
Code to tune to the CHAN D and read the RSSI value is here
This will include incrementing the channel through the required number of control channels.
The NLIST D variable will decrement. If it is not zero the loop will continue.
RSSI1 D will contain the strongest level read across the 21 control channels.
CHWK1_D will contain the channel number with the strongest RSSI level.
RSSI2_D will contain the second strongest level read across the 21 control channels.
CHWK2 D will contain the channel number with the second strongest RSSI level.
                 EMGNCY B,NON911
                                            , IF NOT 911 CALL = JUMP
        This level will be compared to -80 dBm or greater if this is the first pass
        JBR
                 FIRSTPASS, NOCOMPARE; IF NOT FIRSTPASS CALL = JUMP
                 FIRSTPASS: This will indicate if this is the second time through this code
        MOV A.RSSH_D
        SUBC A, #133 : Subtract decimal 133 which corresponds to -80 dBm
        JC SCNDCC; jump back to top of SCNDCC if carry bit it set. This indicates a negative number.
The Value is greater than or equal to -80dBm
NOCOMPARE:
NON911:
        ;CHWK1 D is moved to CHAN D and the channel is tuned.
        MOV CHAN D, CHWK1 D
        MOV CHAN_D+1,CHWK1_D+1
        MOV RSSI D.RSSII D
        JMP TUNEC; Jump to tune channel routine
```

#### Dave Carey Giordano Automation Corp. Vice President Applications Engineering

Dave has 15 years experience as a RF test/design engineer. He worked for 11+ years at Tobyhanna Army Depot developing test software for military communication equipment. He spent 2 years working for PRIMUS Technologies, a circuit board manufacturer, in Williamsport Pa. developing automatic test programs and designing test interface hardware for telecommunications equipment. He was hired at Giordano to develop the application engineering department.

Dave has a variety of accomplishments. He developed a demonstration program using VXI test assets, where he modeled a product and mapped its end to end functional test program into our Diagnostician tool. His electronic engineering and software background makes him very well qualified to work with both manufacturers and ATE suppliers to provide "Factory of the Future" solutions. He develops applications to automate test equipment in both commercial factories and field service depot operations. He also developed an embedded application in the Seawolf Submarines Fault Localization System for Ship Controls. He has designed, developed and maintained automatic test programs, test program interfaces for Automatic test stations, application test systems for a wide variety of circuit card assemblies (RF, digital, micro-controllers, video, and analog,) application test software using Microsoft Visual Basic and National Instruments LabWindows CVI. . He has designed assembly language software for telecommunications equipment. In this function he has become intimately familiar with the AMPS, TDMA and CDMA protocols for cellular telephone equipment. He has experience using, OrCAD 7.0 for interface design development and printed circuit card layout. He developed the ISO-9001 quality documentation and plans for test and design activities. This included supporting the ISO-9001 audit and subsequent updates to Design and Test documentation. He has been a program manager on several manufacturing jobs. This requires scheduling materials for production and test, tracking equipment and manpower resources, identifying production test failures, and performing failure trend analysis.

<u>Awards:</u> Walt Peterson IEEE Memorial Award for the "Most Technologically Significant" paper on "A New Breed of Smart Depot Testers using COTS Technology" at Autotestcon 1995, in Atlanta, Ga.

**Education:** Dave is a 1983 graduate of Wilkes University. He earned his Bachelor of Science, Electrical Engineering, with a minor in Physics.

On May 16<sup>th</sup>, 1998 he was awarded his Master of Science in Electrical Engineering at Wilkes University. Dave's thesis is titled: "Developing Diagnostic Test Programs using Model-Based Reasoning." He was awarded the "Most Outstanding Electrical Engineering Graduate Student" award for having the highest GPA, 3.90.